


## HOW TO FIND YOUR GENERATOR SERIAL & MODEL NUMBER

MODEL	<input type="text"/>
SERIAL	<input type="text"/>
VOLTS	<input type="text"/>
AMPS	<input type="text"/>
1 PH. 60 Hz. RPM 3000	
RAINPROOF ENCLOSURE FITTED	
CLASS II INSULATION	
RATED AMBIENT TEMP - 25° C	
FOR STANDBY SERVICE	
NEUTRAL FLOATING	
MAX LOAD UNBALANCE - 50%	

Your generator's silver data plate is located on or in the area of the control panel. Item/model and serial numbers will be found on the data plate.

### Locate Your Serial Number TRANSFER SWITCH

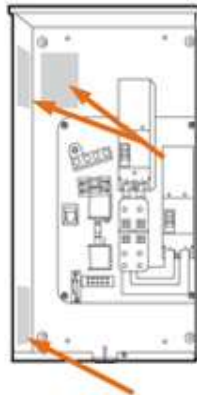

There are multiple places where your transfer switch's serial number may be located. If the serial number is not found in any of the locations in the diagram, refer to your owner's manual or call 1-888-9ACTIVATE (1-888-922-8482).



### Locate Your Serial Number RESIDENTIAL (AIR-COOLED)

8kW, 10kW, 13kW, 14kW, 16kW, 17kW, 20kW



### COMMERCIAL (LIQUID-COOLED)

22kW, 25kW, 27kW, 30kW, 36kW, 45kW, 48kW, 60kW

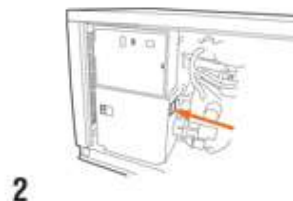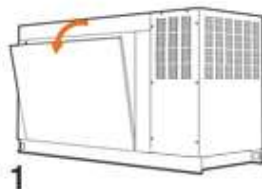

## Power Washer Data Decal Locations



Data Decal: It will be found on either side of the engine shroud, depending on model


## Locate Your Serial Number PORTABLES



GP1800, GP3250



GP5000, GP5500, GP6500,  
GP7000, GP7000E, GP8000,  
GP8000E

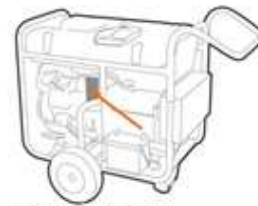

GP15000E, GP17500E



XP4000, XP6500E,  
XP8000E



XG4000, XG6500, XG7000,  
XG8000, XG10000E



IX800, IX1600, IX2000